




Priručnik za postavljanje

Split sustav za klimatizaciju

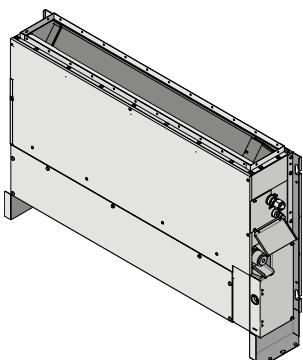

**FNA25A2VEB
FNA35A2VEB
FNA50A2VEB
FNA60A2VEB**

**FNA25A2VEB9
FNA35A2VEB9
FNA50A2VEB9
FNA60A2VEB9**

Priručnik za postavljanje
Split sustav za klimatizaciju

hrvatski

8 Tehnički podaci

Simbol	Značenje
SA*, F1S	Odvodnik prenapona
SR*, WLU	Prijemnik signala
SS*	Sklopka za odabir
SHEET METAL	Pločica učvršćenja redne stezaljke
T*R	Transformator
TC, TRC	Odašiljač
V*, R*V	Varistor
V*R	Diodni most bipolarnog tranzistora izoliranog prolaza (IGBT) modul napajanja
WRC	Bežični daljinski upravljač
X*	Stezaljka
X*M	Redna stezaljka (blok)
Y*E	Vodič za zavojnicu elektroničkog ekspanzionog ventila
Y*R, Y*S	Svitak prekretnog elektromagnetskog ventila
Z*C	Feritna jezgra
ZF, Z*F	Filtar šuma



EAC



Copyright 2017 Daikin

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P456958-1J 2020.12