

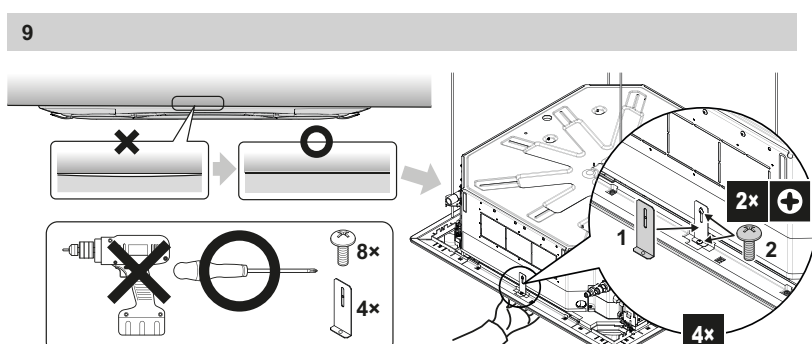
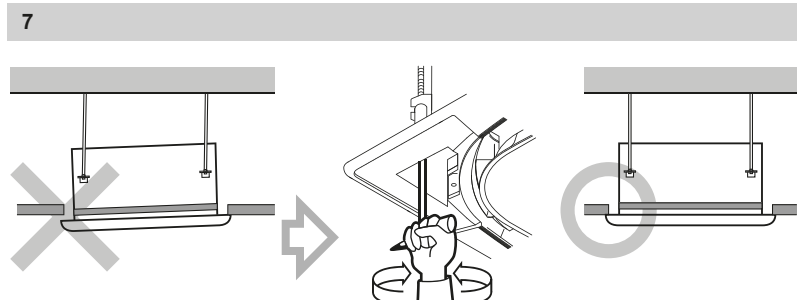
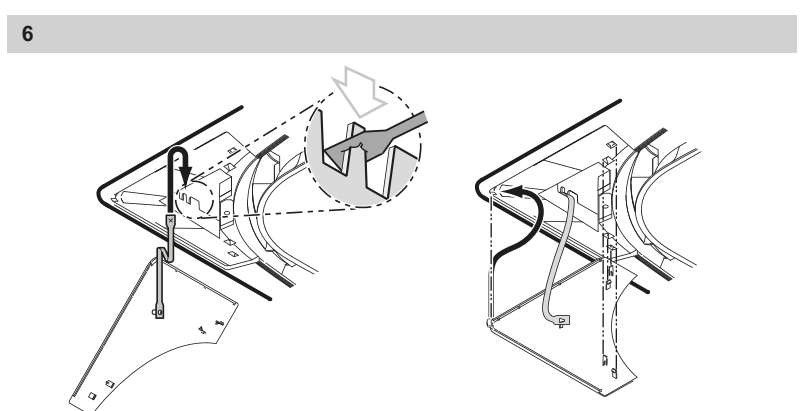
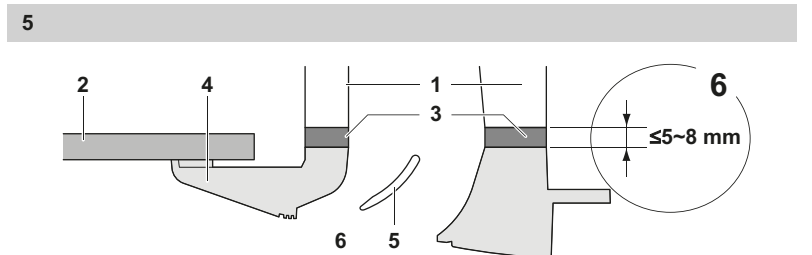
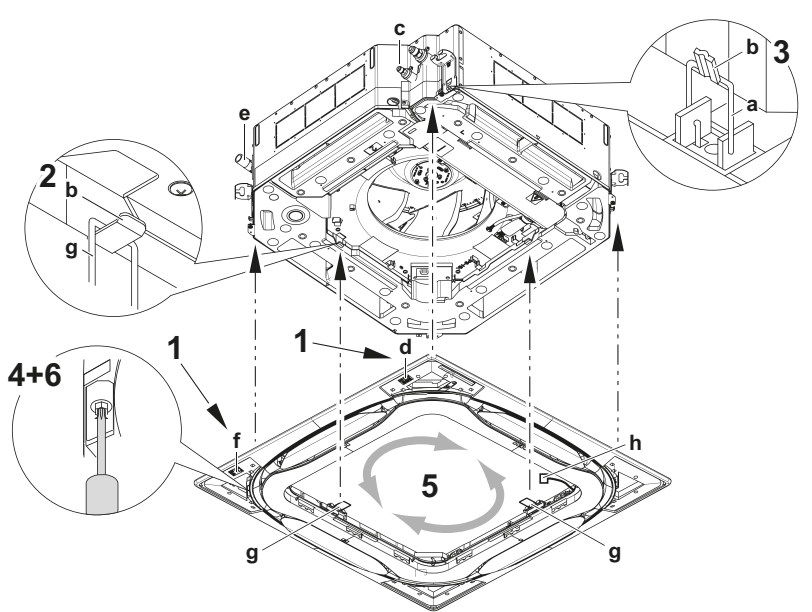
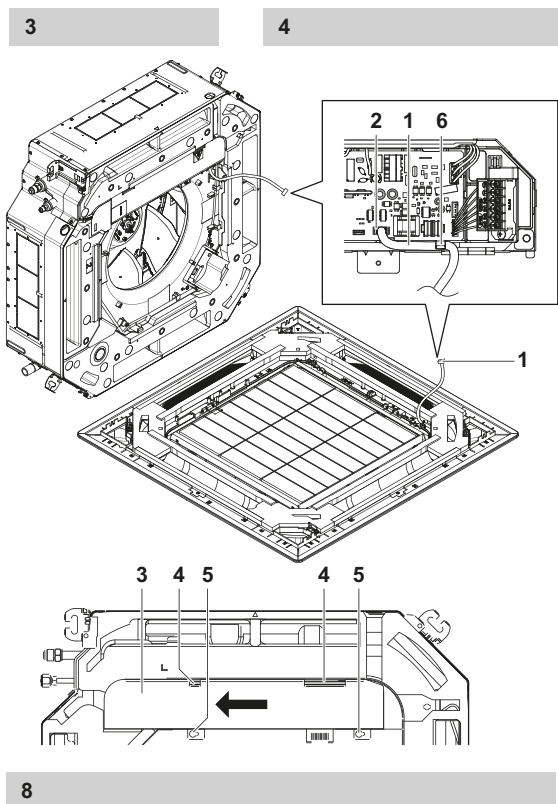
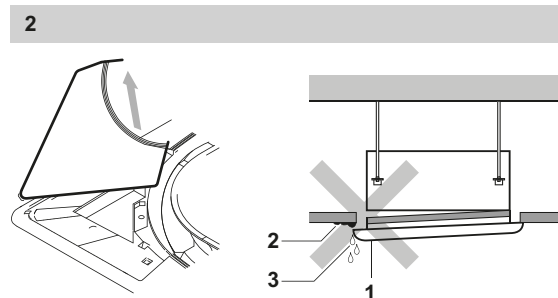


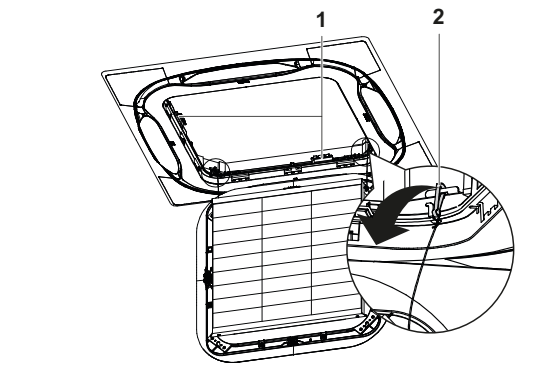

INSTALLATION MANUAL

Designer Decoration panel

BYCQ140E2P
BYCQ140E2PB

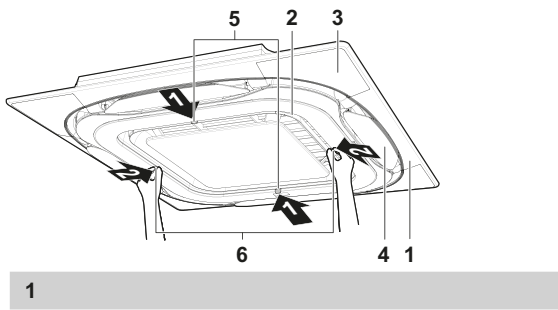



- Read this manual attentively before installation. Do not throw it away. Keep it in your files for future reference.
Improper installation or attachment of equipment or accessories could result in electric shock, short-circuit, leaks, fire or other damage to the equipment. Be sure only to use accessories made by Daikin which are specifically designed for the use with the equipment and have them installed by a professional. If unsure of installation procedures or use, always contact your dealer for advice and information.

The English text is the original instruction. Other languages are translations of the original instructions.

Before installation

- Leave the unit inside its packaging until you reach the installation site.
- Refer to the installation manual of the indoor unit for items not described in this manual.


NOTE



To the installer

Be sure to instruct the customer how to properly operate the system showing him or her the operation manual of the indoor unit.

Accessories

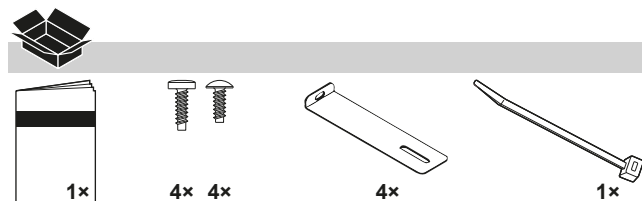


Preparation before installation

For this unit, you are able to select air flow directions. To discharge air in 2 or 3 directions, it is necessary to purchase the optional blocking pad kit for sealing air discharge outlets.

Handling of the decoration panel

To prevent any damage to the decoration panel, take care of the following:

- Never place the panel facing down.
- Never let the panel lean against a wall.
- Never put it down on a projecting object.
- Never touch or put pressure on the swing flap in order to prevent malfunction of the swing flap.
- Be careful not to damage the 4 tabs at the back of the corner decoration cover.

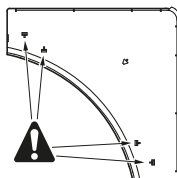

Preparing the decoration panel for installation

- 1 Remove the suction grille from the decoration panel.
 - Unlock the suction grille knobs by pushing them inward (5).
 - Open the suction grille (2) while pushing the sliders (6) inward. (See figure 1)
 - 1 Decoration panel
 - 2 Suction grille
 - 3 Corner decoration cover
 - 4 Swing flaps
 - 5 Knobs
 - 6 Sliders
- See figure 2. Remove the hooks (2) to detach the suction grille from the decoration panel.
- Remove all the transporting tapes and 2 brackets for temporary installation attached on the suction grille.
- Attach the brackets for temporary installation on locations (1) if needed. (See figure 2)
- 2 Remove the corner decoration cover on each corner by pulling it up in the direction of the arrow. (See figure 3)

Installation of the decoration panel to the indoor unit

Refer to the installation manual of the indoor unit for details on installing the indoor unit.

- 1 Install the decoration panel (See figure 5)
 - a Mounting bracket
 - b Hook
 - c Piping section
 - d "Piping side" marking
 - e Drain section
 - f "Drain side" marking
 - g Temporary latch
 - h Swing flap motor lead wire
- 1 Hold the decoration panel against the indoor unit by matching the piping side and drain side marks on the decoration panel with the position of the piping section and drain section of the indoor unit.
- 2 Temporarily install the decoration panel to the indoor unit by hanging the temporary latch into the hooks of the indoor unit body. (2 locations)
- 3 Hook the 4 mounting brackets on the corner sections of the decoration panel onto the hooks around the indoor unit body. Make sure that the swing flap motor lead wire is not caught between the indoor unit and the decoration panel.
- 4 Screw all 4 hexagon head screws located in the corner section in for approximately 5 mm. The panel will rise.
- 5 Adjust the decoration panel by turning it in the direction indicated by the arrows on the figure so that the ceiling opening is completely covered.
- 6 See figure 6 (cross section of the air outlet) and tighten the hexagon head screws until the thickness of the sealing material between the decoration panel and the indoor unit reduces to 12 mm or less.
 - 1 Indoor unit
 - 2 Ceiling
 - 3 Sealing material
 - 4 Decoration panel
 - 5 Swing flap
 - 6 Air outlet

- 2 Fix the gap between the decoration panel and the unit if necessary. (See figure 10)

Precautions

- Improper tightening of the screws (see figure 4) may cause air to leak into the unit and between the ceiling and the decoration panel (1) resulting in formation of contamination (2) and dew (3).
- If there is a gap remaining between the ceiling and the decoration panel after tightening the screws, re-adjust the indoor unit body height (see figure 9). Adjustment of the indoor unit body height is possible through the holes in the corners of the decoration panel. The indoor unit must be kept levelled and the drain piping kept unaffected.

- 3 Wiring of the decoration panel (See figure 8)



Make sure to turn off the power supply before wiring!

- 1 Swing flap motor lead wire
- 2 Connector
- 3 Electric components box lid
- 4 Hooks
- 5 Screw (2 locations)
- 6 Clamp

- Remove the electric components box lid. Loosen the 2 screws, slide the electric components box lid in the direction of the arrows and disengage it from the hooks.
- Securely connect the connectors for swing flap motor lead wire installed on the decoration panel.
- Securely fix the swing flap motor lead wire with the supplied clamp.
- Replace the electric components box lid reversing the procedure to remove it.

NOTE



Do NOT over tight screws during assembling process to avoid any damage.




Make sure that the swing flap motor lead wire is not caught between the indoor unit and the decoration panel and in between the electric component box lid.

Installation of the suction grille and the corner decoration cover

Install the suction grille

Install the suction grille by reversing the procedure shown in paragraph "Preparing the decoration panel for installation" on page 1.

- Return the suction grille hooks on the decoration panel.
- Close the suction grille and lock the suction grille knobs by pushing them outward.

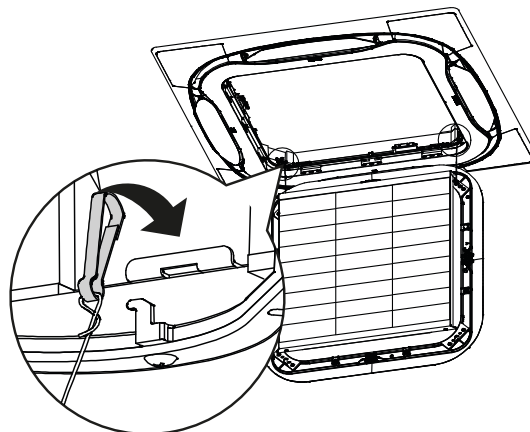

- It is possible to install the suction grille in 4 directions by simply turning it 90 degrees.
- Change the direction when adjusting the direction of the suction grille of multiple units or to comply with demands of the customer.

NOTE



Make sure that strings are not hanging out in between the decoration panel and the suction grille.

Install the corner decoration cover

(See figure 7)



- 1 Attach the string of each corner decoration cover to the pin of the decoration panel.



NOTE





When the corner decoration cover gets loose during maintenance of the decoration panel of the indoor unit, the string prevents the corner decoration cover from falling on the floor and getting damaged.

- 2 Install each corner decoration cover.
 - First insert the hook at the square tip of the corner decoration cover into the hole at the decoration panel corner.
 - Then position the 4 latches of the corner decoration cover to fit into the holes of the decoration panel and gently push the corner decoration cover onto the decoration panel.

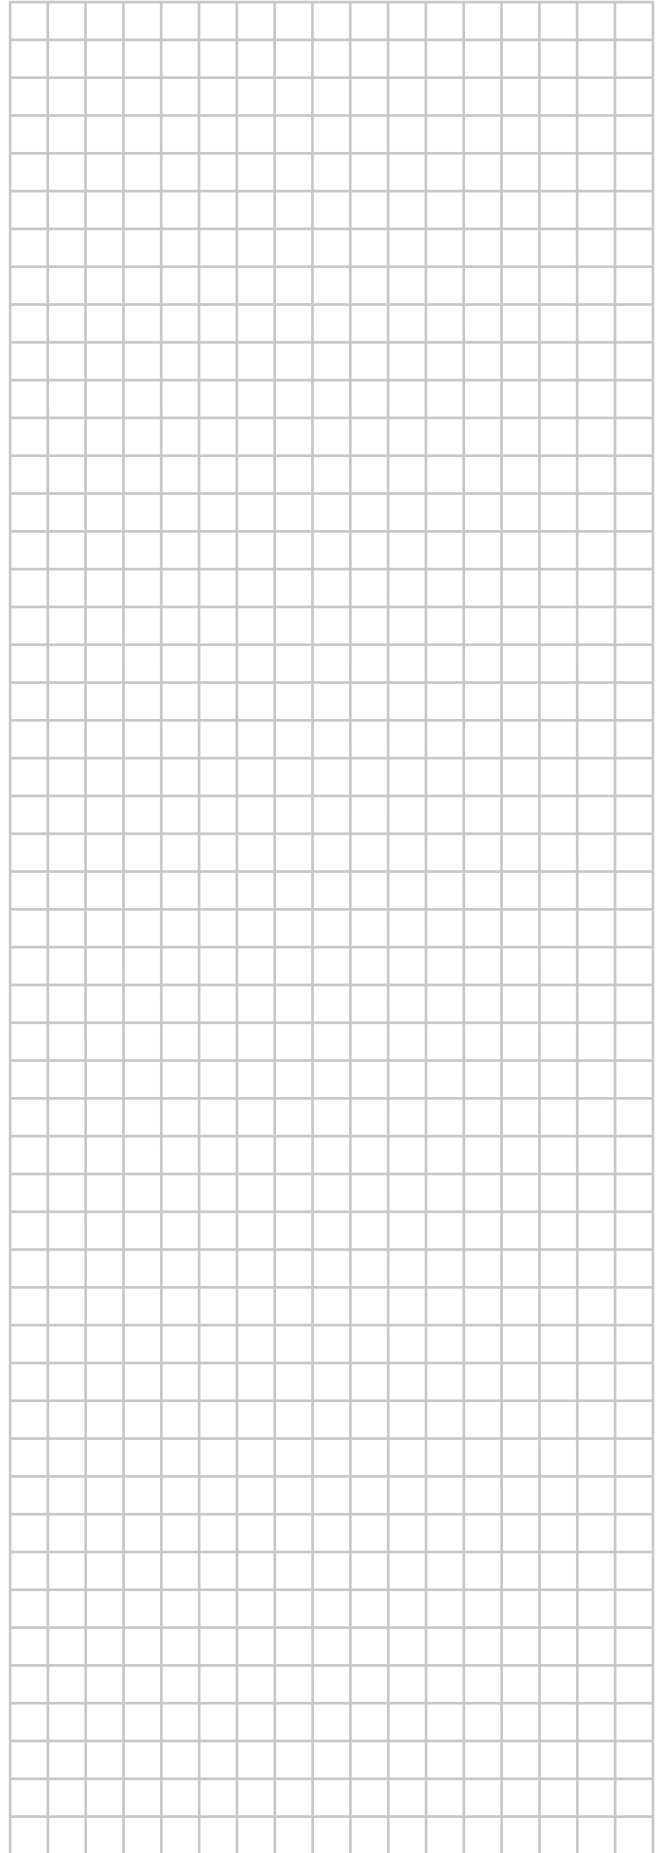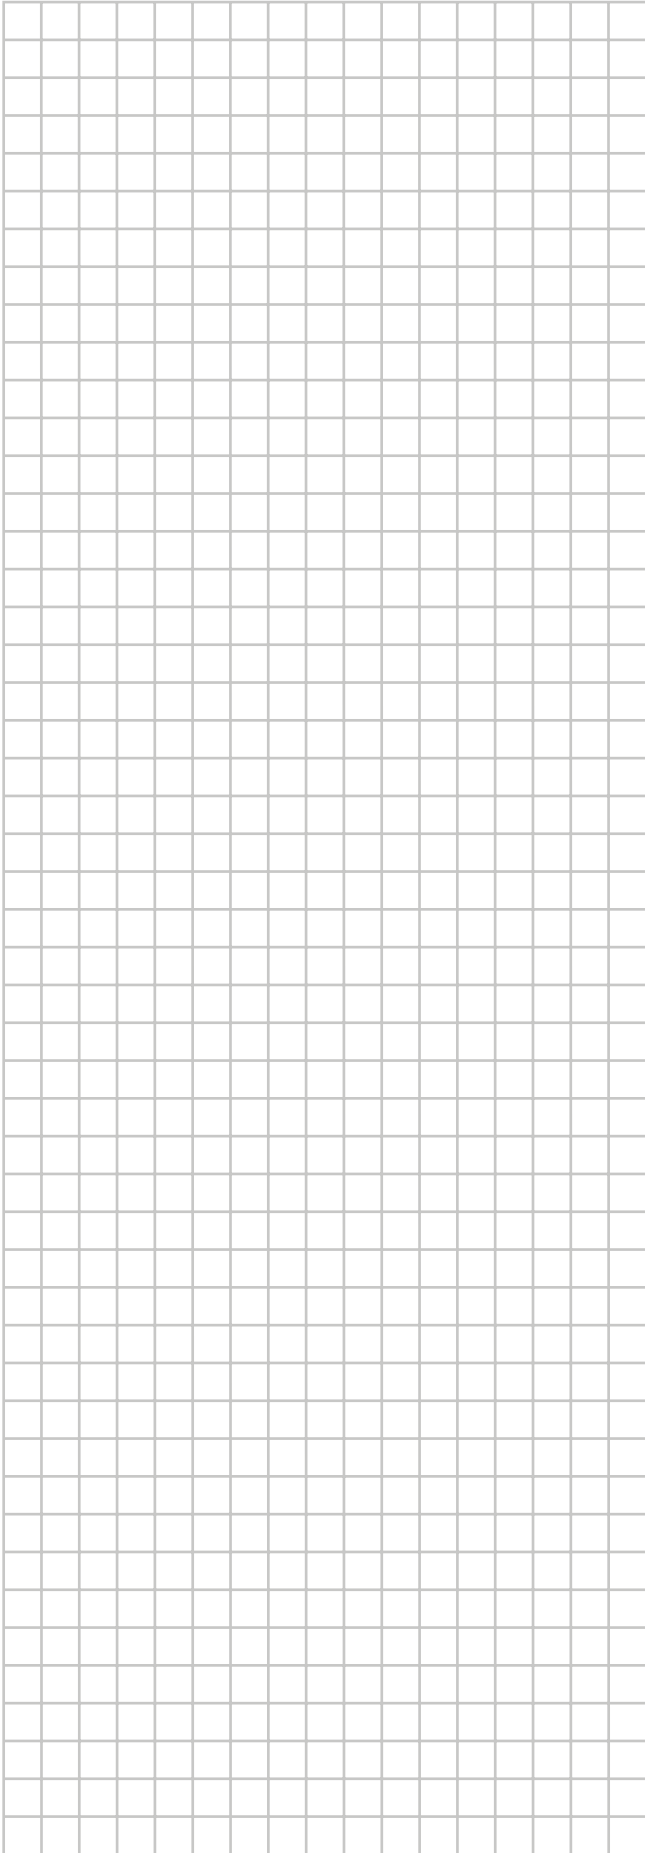

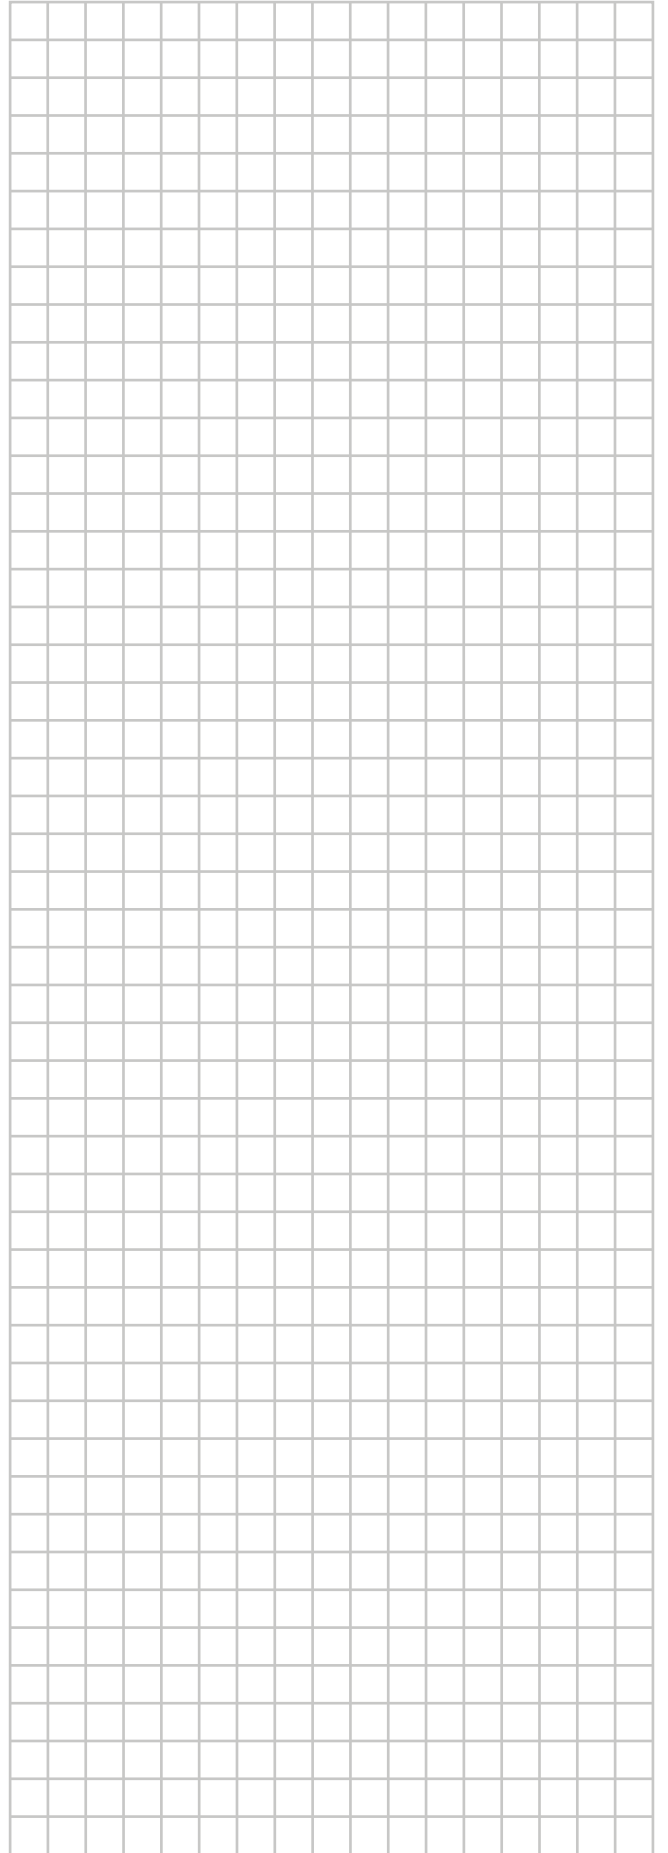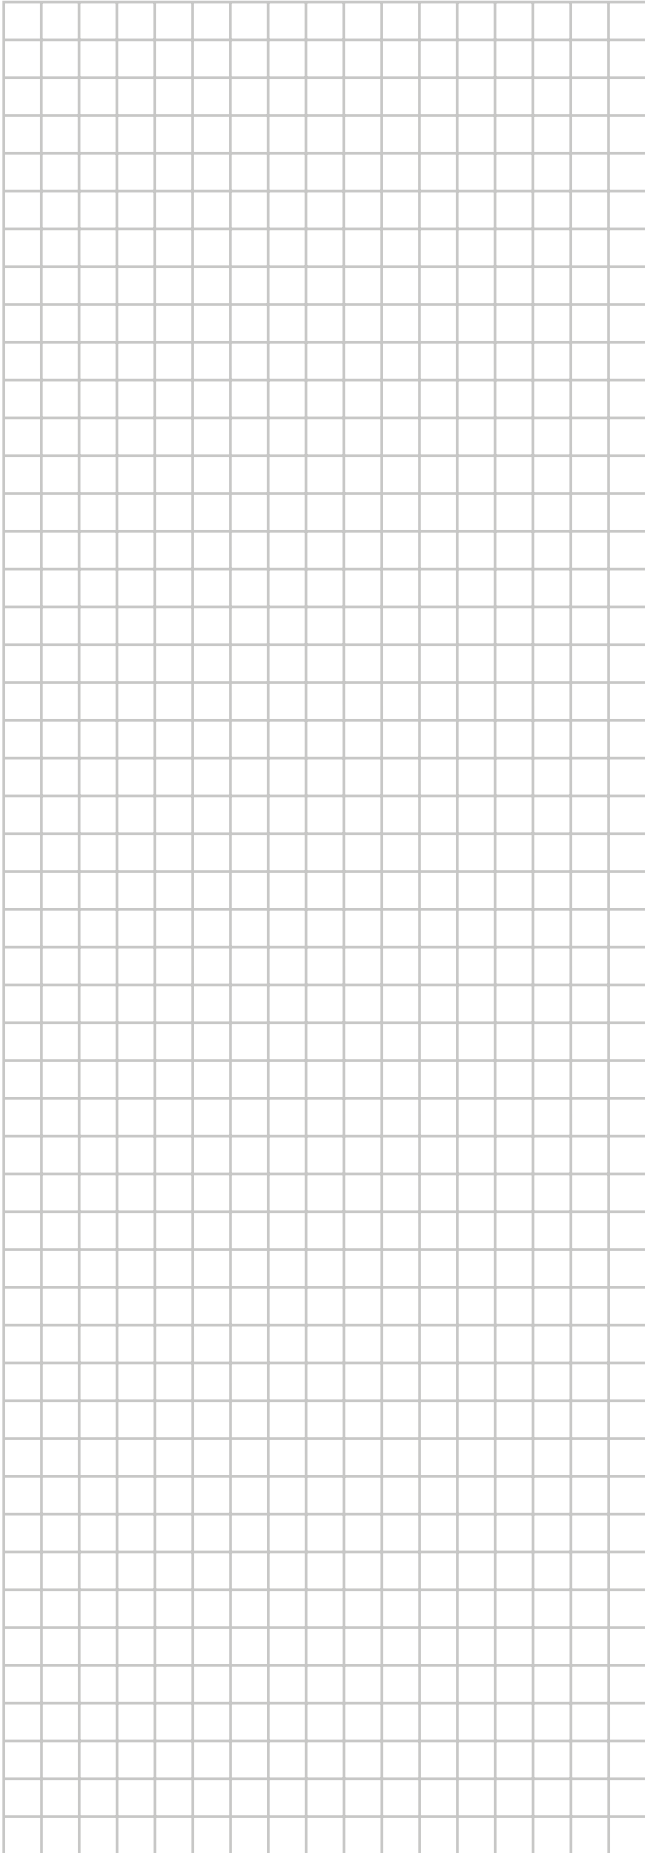

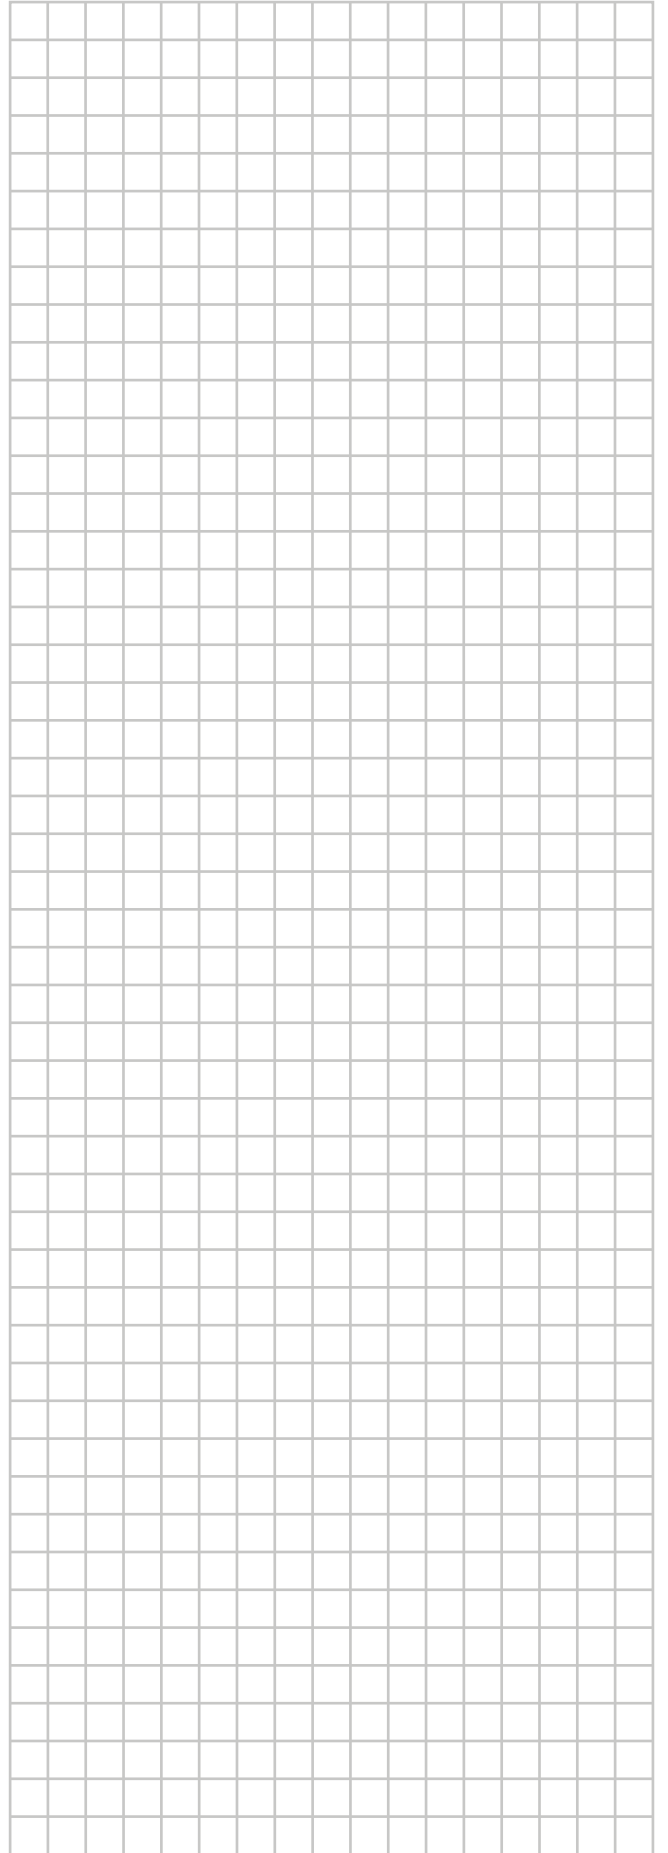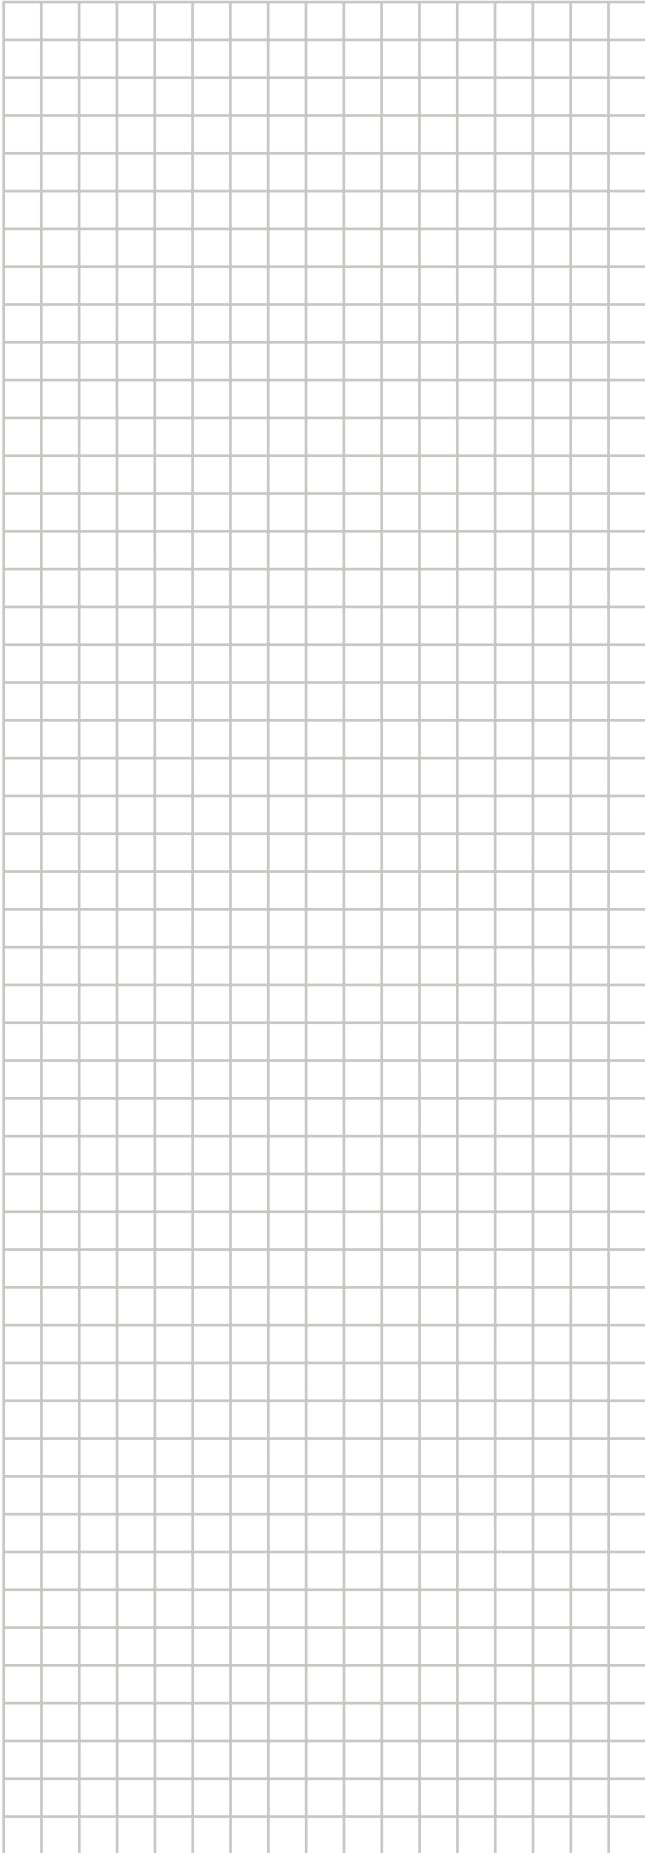

DAIKIN INDUSTRIES CZECH REPUBLIC s.r.o.

U Nové Hospody 1/1155, 301 00 Plzeň Skvrňany, Czech Republic

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P561932-1 2018.12